
MANUAL AMASADORA MARCA BBG REF MASH


DH30A SERIES SPIRAL MIXER

DH30A series spiral mixers are a new type of kneader. Both the dough arm and bowl are running that it can raise the mixing speed and efficiency greatly. The machines are equipped with protect cover, easy operable and safety. They are good looking and easy clean, suitable for mixing flour in hotels, restaurants and public canteens.

Technical specifications

Model	Voltage	Frequency	Power	IP Rating	Bowl volume	Max capacity	Dimension mm	Net weight
DH30A	~110	60Hz	1.5	IPX1	30	12.5kg	730×445×860	120KG

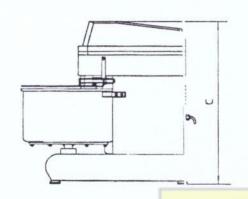

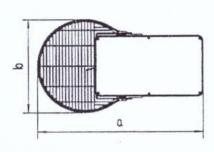

Operation and Notes

- 1. Set it on a dry horizontal plane (or support), take it firm.
- 2. Before use, ensure that power supply corresponds to that required by the machine and external ground wire is reliably connected. de pesaje y
- 3. Ensure that flour mixing capacity is lower than the max. flour capacity.
- 4. Before start, ensure that safe protect cover has be put down.
- 5. Do not put hands and hard-things into the bowl in running.
- 6. Do not hold and drag the belts and chains by hand.

Maintenance

- 1. Continuous run time is not too long, keep the machine used long.
- 2. After used, clean the machine, as to avoid bacteria growth.
- 3. The transmission case is packed with special grease that will last for service six months. To add or replace grease, it is necessary to remove the upper cover.

Note: Before maintenance, the machine must be cut off the power supply.

Trouble shooting:

Trouble	f'robable cause	Remedy Check the electric circuit tighten those loose connectors		
The mixing shaft do not rotates after switch on	Electric cc nnectors are loose			
Square rod tremble	Lock bolts are loose	Tighten those bolts		
Temperature rise of motor is too	Lack of voltage	Check the supply voltage		
high, below speed	Over load	Less load		
The noise of the transmission case	Lubrication is insufficient	Add or replace the grease		
is serious	Chains are loose	Tighten the chains		
The agitator knocks with the bowl	The agitator the bowl is deformed	Repair or replace deformed part		

Warning: It cannot be cleaned by water directly.


MANUAL AMASADORA MARCA BBG REF MASH

DH30A SERIES SPIRAL MIXER

DH30A series spiral mixers are a new type of kneader. Both the dough arm and bowl are running that it can raise the mixing speed and efficiency greatly. The machines are equipped with protect cover, easy operable and safety. They are good looking and easy clean, suitable for mixing flour in hotels, restaurants and public canteens.

Technical specifications

Model	Voltage	Frequency	Power	IP Rating	Bowl volume	Max capacity	Dimension mm	Net weight
DH30A	~110	60Hz	1.5					weigh
	110	OUNZ	1.5	IPX1	30	12.5kg	730×445×860	120KG

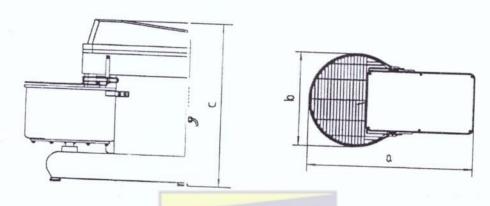

Operation and Notes

- 1. Set it on a dry horizontal plane (or support), take it firm.
- 2. Before use, ensure that power supply corresponds to that required by the machine and external ground wire is reliably connected.
- 3. Ensure that flour mixing capacity is lower than the max. flour capacity.
- 4. Before start, ensure that safe protect cover has be put down.
- 5. Do not put hands and hard-things into the bowl in running.
- 6. Do not hold and drag the belts and chains by hand.

Maintenance

- 1. Continuous run time is not too long, keep the machine used long.
- 2. After used, clean the machine, as to avoid bacteria growth.
- 3. The transmission case is packed with special grease that will last for service six months. To add or replace grease, it is necessary to remove the upper cover.

Note: Before maintenance, the machine must be cut off the power supply. Trouble shooting:

Trouble	F'robable cause	Remedy		
The mixing shaft do not rotates after switch on	Electric connectors are loose	Check the electric circuit tighten those loose connectors		
Square rod tremble	Lock bolts are loose	Tighten those bolts		
Temperature rise of motor is too	Lack of voltage	Check the supply voltage		
high, below speed	Over load	Less load		
The noise of the transmission case	Lubrication is insufficient	Add or replace the grease		
is serious	Chains are loose	Tighten the chains		
The agitator knocks with the bowl	The agitator the bowl is deformed	Repair or replace deformed part		

Warning: It cannot be cleaned by water directly.